


RRH-2000 AIR HAMMER

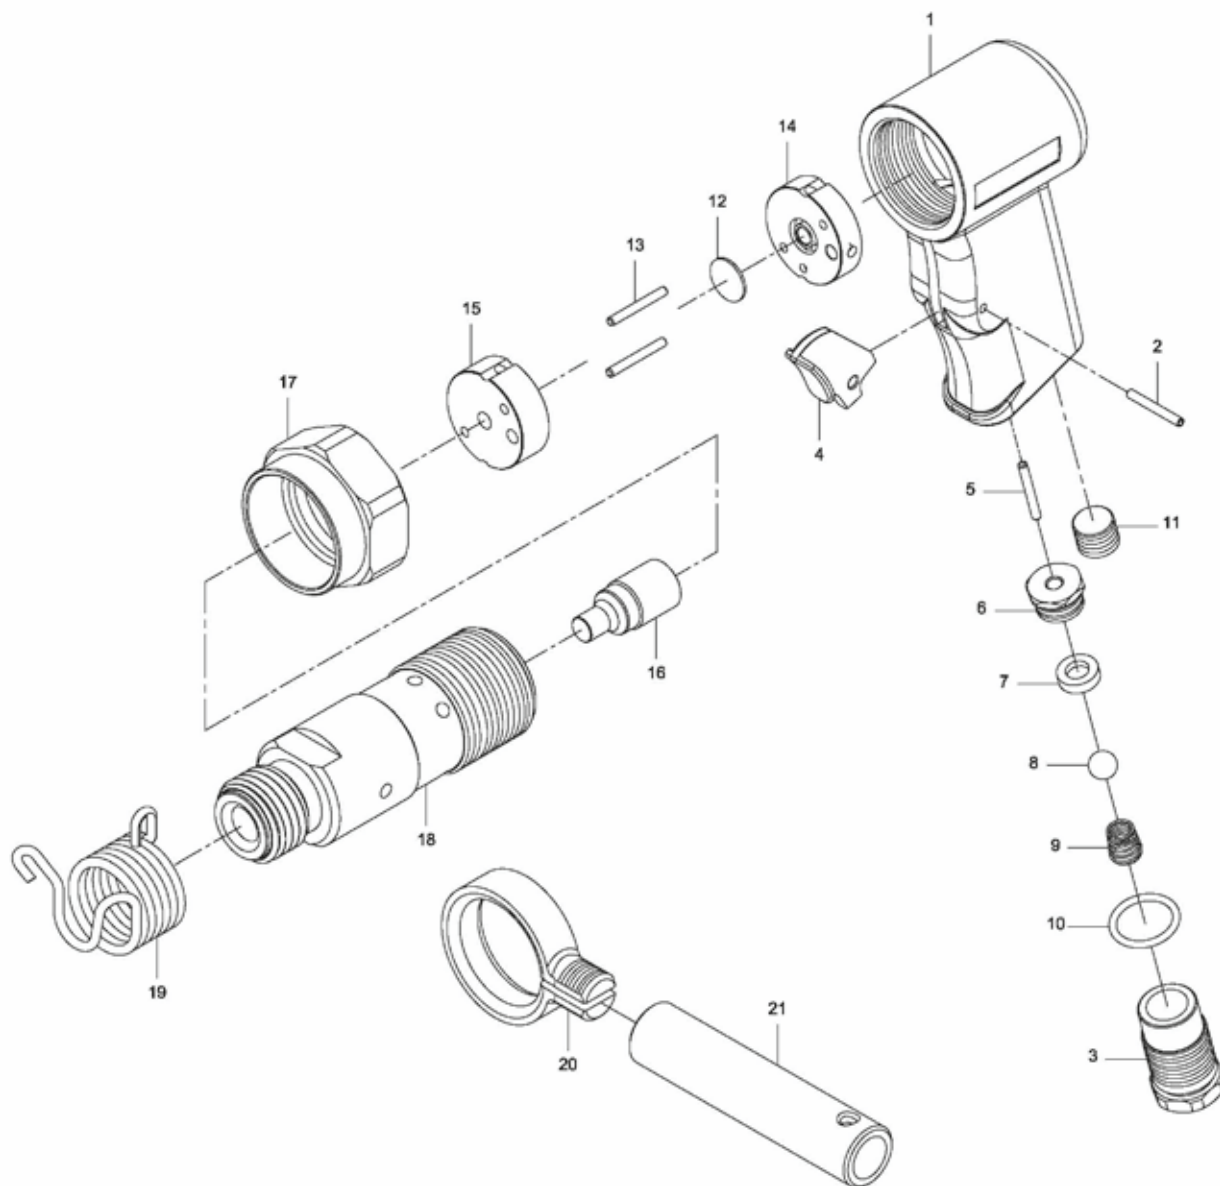

Index no.	Parts no.	Description
1	10201 RRH-2000	Motor Housing
2	10202 RRH-2000	Spring Pin (1/8" x 1")
3	10203 RRH-2000	Air Inlet
4	10204 RRH-2000	Trigger
5	72002 RRH-2000	Pin (3 x 27,8)
6	10207 RRH-2000	Nut
7	40326	Valve seat
8	9150-3010-00-00	Steel ball (3/8")
9	40329	Spring
10	OR01608204	O-Ring (16,8 x 2,4)
11	10221 RRH-2000	Screw (M14 x 14L)

Index no.	Parts no.	Description
12	10212 RRH-2000	Spacer
13	10205 RRH-2000	Pin (2) (3 x 22,8)
14	10214 RRH-2000	Rear plate
15	10215 RRH-2000	Front plate
16	10216 RRH-2000	Piston
17	10217 RRH-2000	Connect nut
18	10218 RRH-2000	Cylinder
19	10219 RRH-2000	Drawspring
20	10220 RRH-2000	Handle ring
21	70340 RRH-2000	Side handle