


RR-1800DD SCREWDRIVER

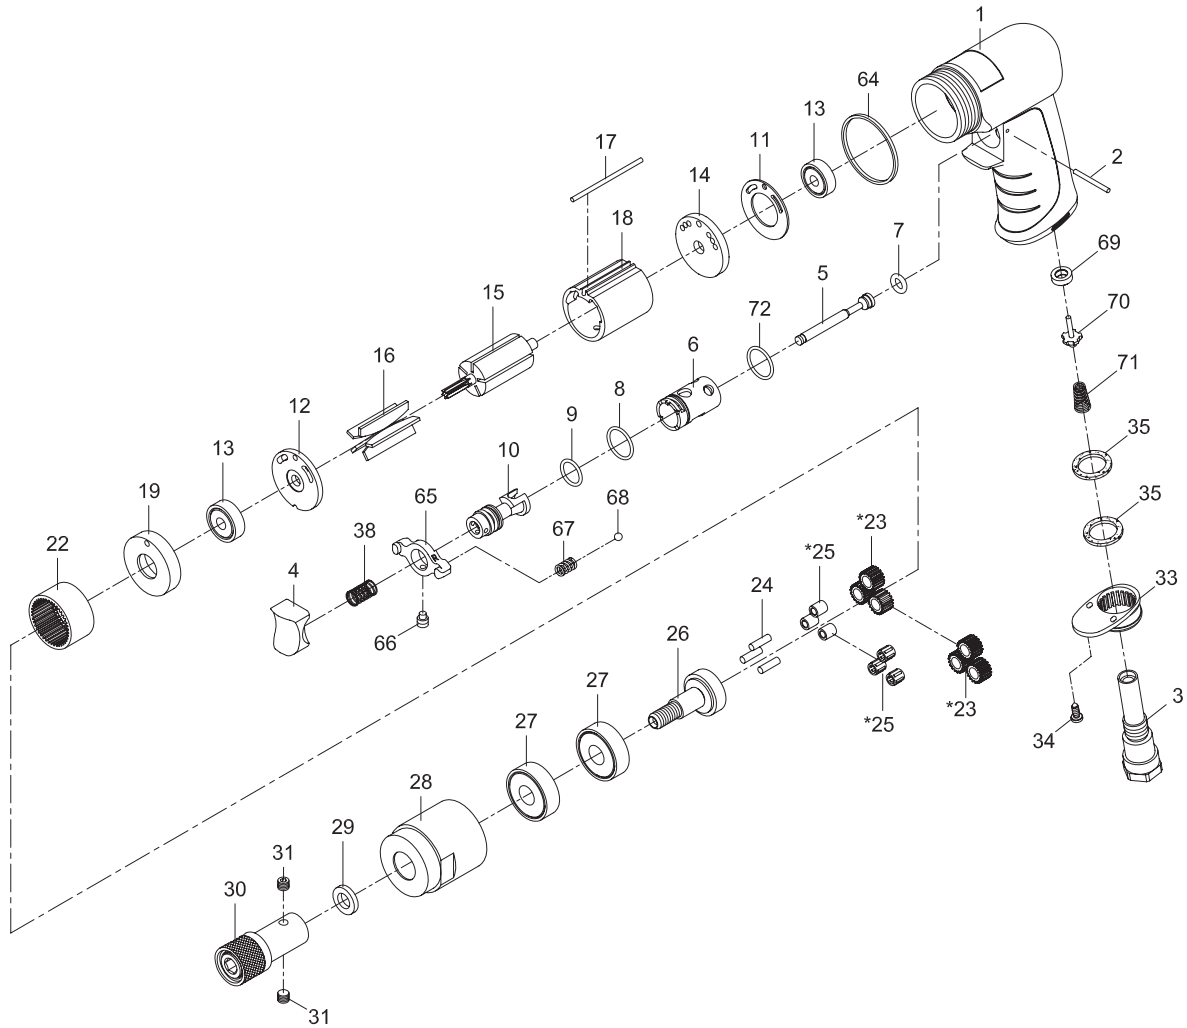

Index No.	Parts No.	Description	Index No.	Parts No.	Description
1	75-7255P01	Motor Housing	24	30124	Pin (3) (4x13.8)
2	73102	Spring Pin (2x24L)	25	80225	Bushing (3)
3	75-725503	Air Inlet	*25	080245	Needle Bearing (3) (4x7x8)
4	75-725304	Trigger	26	70626	Work Spindle
5	75-725505-12	Valve Stem	27	080227	Ball Bearing (2) (6201z)
6	75-725506	Reverse Bushing	28	70534	Clamp Nut
7	70107	O-Ring (4.8x1.9)	29	70133	Washer
8	795820	O-Ring (15.5x1.5)	30	QC-01SUB	Quick Change Chuck (1/4")
9	OR01200105	O-Ring (12x1.5)	31	71946	Set Screw (2) (M5x4)
10	74-796210	Reverse Valve	33	70110-21	Exhaust Diffuser
11	80211	Motor Gasket	34	40309	Screw (2) (TS2.9)
12	80214	End Plate	35	75-725350	Damping Material (2)
13	030113	Ball Bearing (2) (626zz)	38	82208	Valve Spring
14	75-725314	Rear End Plate	64	75-725351	Decoration Ring
15	80215-12	Rotor	65	75-725521	Reverse Lever
16	80216	Rotor Blade (5)	66	526328	Screw (M4x5)
17	75-725317	Pin (2.5x57)	67	78-728408	Spring
18	80218-22	Cylinder	68	52245	Steel Ball (3/32")
19	80219	Front End Plate	69	32-301207	Valve Seat
22	80222	Internal Gear	70	32-301210	Valve
*23	80223-11	Planet Gear (3)	71	32-301208	Spring
	80223-14	Planet Gear (3)	72	72009	O-Ring (15.7x1.7)

* Optional Parts

88-7255P-0001