


Air drill RRI-2006

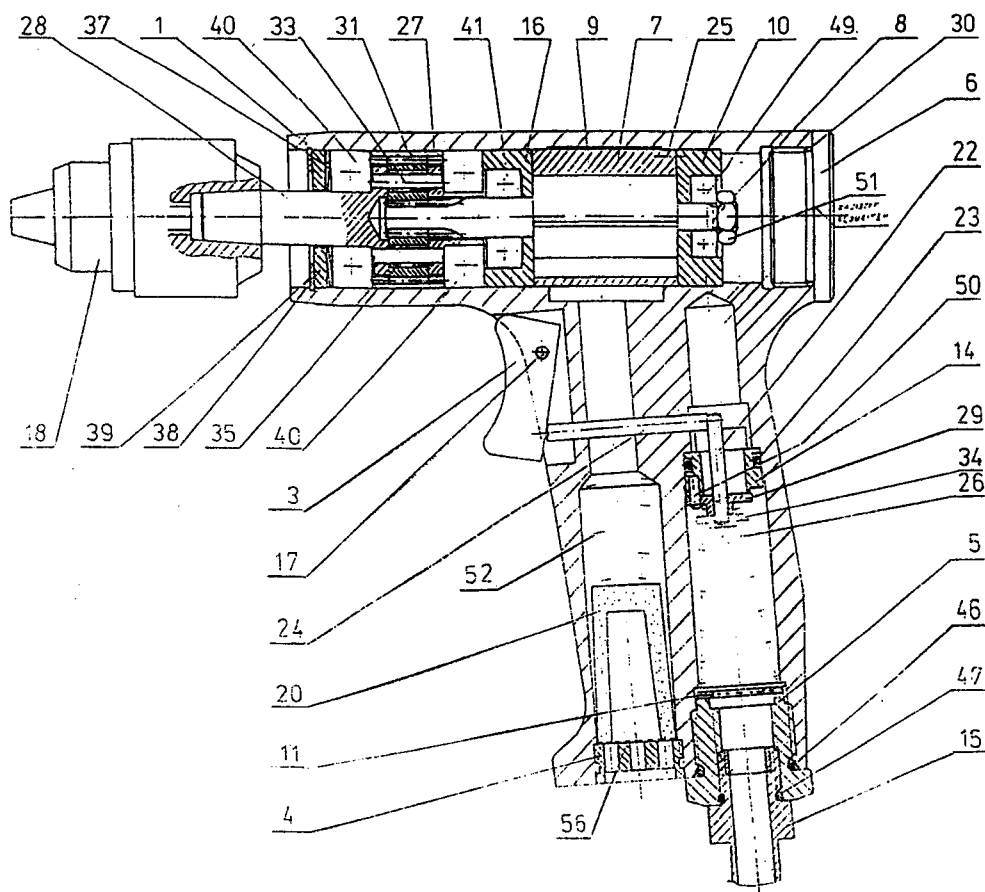

Ref no	Part no	Description	Qty
01	2006-001-00	housing	1
03	2006-003-00	throttle lever	1
04	2006-004-00	silencer cap	1
05	2006-005-00	nut	1
06	2006-006-00	bearing cap	1
07	2006-007-00	cylinder	1
08	2006-008-00	rotor	1
09	2006-009-00	rotor blade	4
10	2006-010-00	lower plate	1
11	2006-011-00	air screen	1
14	2006-014-00	throttle bushing	1
15	2006-015-00	hose joint	1
16	2006-016-00	upper plate	1
17	2006-017-00	pin 3 x 25	1
18	2006-018-00	drill chuck 6 mm/B10	1
20	2006-020-00	silencer	1
21	2006-021-00	pin 3.5 x 34.8	1
22	2006-022-00	pin 3 x 23.8	1
23	2006-023-00	o-ring 12 x 2	1
24	2006-024-00	throttle pin	1
25	2006-025-00	pin 3 x 8	2

Ref no	Part no	Description	Qty
26	2006-026-00	conical spring	1
27	2006-027-00	internal gear	1
28	2006-028-00	main shaft	1
29	2006-029-00	throttle valve	1
30	2006-030-00	o-ring 25 x 2	1
31	2006-031-00	planet gear	2
33	2006-033-00	planet gear pin	2
34	2006-034-00	spring guide	1
35	2006-035-00	bearing needles II 1 x 7.8	24
37	2006-037-00	plate spring	2
38	2006-038-00	bearing plate	1
39	2006-039-00	snap ring 26	1
40	2006-040-00	ball bearing 6000 22	2
41	2006-041-00	ball bearing 607 22	1
46	2006-023-00	o-ring 12 x 2	1
47	2006-047-00	o-ring 10 x 2	1
49	2006-049-00	ball bearing 62522	1
51	2006-051-00	hex nut m5	1
52	2006-052-00	conical spring	1
56	2006-056-00	silencer sheet	1