


RRI-180T IMPULSE WRENCH

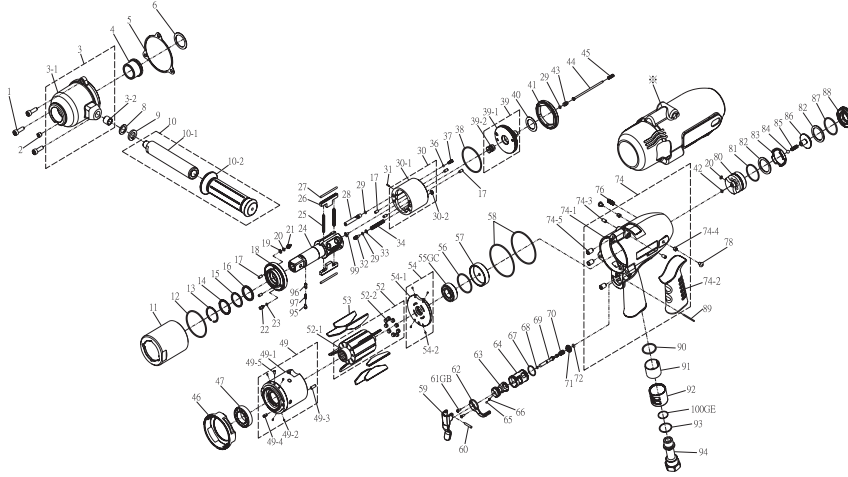

Index No.	Part No.	Description	Q'ty
1	00-0140	Cap Screw (M6xP1x18L)	3
2	00-0612	Set Screw (1/16"x27NPTx1/4"L)	1
3	420-PW180-286-0201-10	Front Housing, Compl.	1
3-1	I180-201	Front Housing	1
3-2	00-4313	Helicoil (M12xP1.5x1D)	1
4	I180-202	Bushing	1
5	I180-205	Gasket	1
6	I150-424	Washer	1
8	00-1514	Plain Washer (ø13xø19x1t) (Acc. Kit)	1
9	00-1811	Spring Washer (M12) (Acc. Kit)	1
10	420-PW180-286-0206-10	Side Handle, Compl. (Acc. Kit)	1
10-1	I180-206	Side Handle (Accessory Kit)	1
10-2	275-029	Rubber Sleeve (Accessory Kit)	1
11	I180-401	Pulse Cylinder Housing	1
12	00-41207	O-Ring (ø52xø2)	1
13	I150-458	C type Retainer Ring	1
14	I150-457	Washer	1
15	I150-409	Back Up Ring	1
16	00-2605	X-Ring (ø25.07xø30.31xø2.62)	1
17	00-3460	Pin (ø4x8)	6
18	I180-408	Front Plate	1
19	I150-431	Back Up Ring	1
20	00-41156	O-Ring (ø3.5xø1.5)	2
21	I150-411	Adjust Screw	1
22	I150-410	Oil Plug	1
23	00-41113	O-Ring (ø2xø1.5)	1
24	I180-405	Main Shaft	1
25	I180-407	Spring	2
26	I180-406	Drive Blade	2
27	I180-452	Roller	2
28	IS180-412	Valve	1
29	00-41178	O-Ring (ø2.5xø1.5)	3
30	420-PW180-286-0404-10	Pulse Cylinder, Compl.	1
30-1	I180-404	Pulse Cylinder	1
30-2	I150-454	Block Cap	1
31	00-3428	Pin (ø2x6)	1
32	I150-455	Valve	1
33	I150-459	Back Up Ring	1
34	I180-453	Spring	1
36	00-3829	Steel Ball (ø3.5)	1
37	IS180-425	Spring	1
38	00-41208	O-Ring (ø49.5xø2)	1
39	420-PW180-186-0415-10	Rear Plate, Compl.	1
39-1	IS180-415@	Rear Plate	1
39-2	IS180-420	Block Cover	1
40	I150-423	Washer	1
41	I180-402	Lock Nut	1
42	00-4153	O-Ring (ø3xø1.5)	1
43	IS180-421	Pressure Valve	1
44	IS180-314	Shut Off Stem	1
45	IS180-317	Spring	1
46	I180-319	Lock Washer	1
47	00-2383	Ball Bearing (6905)	1
49	420-PW180-286-0302-10	Cylinder, Compl.	1
49-1	I180-302	Cylinder	1
49-2	I40S-318	Block	4
49-3	00-3312	Spring Pin (ø4x12)	1
49-4	00-3314	Spring Pin (ø4x8)	1
49-5	00-3325	Spring Pin (ø2x6)	1
52	420-PW180-286-0303-10	Rotor, Compl.	1
52-1	I180-303	Rotor	1
52-2	I180-320	Plug	9

Index No.	Part No.	Description	Q'ty
53	I180-304	Rotor Blade	9
54	420-PW180-286-0305-10	Rear Plate, Compl.	1
54-1	I180-305	Rear Plate	1
54-2	I40S-318	Block	4
55GC	00-2385	Ball Bearing (6003)	1
56	00-4171	O-Ring (ø36xø2)	1
57	IS180-307	Rear Cover	1
58	00-41209	O-Ring (ø64.5xø2)	2
59	I150-504	Trigger	1
60	00-3308	Spring Pin (ø3x18)	1
61GB	00-0512	Flat Head Screw (M3x8L)	2
62	I150-503	Regulator Knob	1
63	IS150-502	F/R Valve	1
64	I150-501	Valve Sleeve	1
65	00-3813	Steel Ball (1/8")	1
66	I100-506	Spring	1
67	00-41145	O-Ring (ø18xø1.5)	1
68	00-4101	O-Ring (ø3xø1)	1
69	IS150-505	Valve Stem	1
70	I150-507	Spring	1
71	I150-508	Bushing	1
72	00-41199	O-Ring (ø1.8xø1.9)	1
74	420-PW180-186-0101-10	Motor Housing, Compl.	1
74-1	IS180-101	Motor Housing	1
74-2	I180-103	Housing Rubber	1
74-3	00-3353	Spring Pin (ø5x8)	2
74-4	00-4302	Helicoil (M5xP0.8x1.5D)	2
74-5	00-4312	Helicoil (M6xP1.0x2D)	3
76	IS100-609	Screw	1
78	00-1304	Cap Screw (M5xP0.8x6L)	2
80	IS180-524	Valve Seat	1
81	00-41206	O-Ring (ø31.47xø1.78)	1
82	IS180-312	Valve Washer	2
83	IS180-518	Seat	1
84	00-3812	Steel Ball (7/32")	1
85	IS180-313	Spring	1
86	IS180-311	Valve	1
87	00-4135	O-Ring (ø32xø2)	1
88	I180-104	Nut	1
89	00-3461	Pin (ø2x30)	1
90	00-41166	O-Ring (ø24xø2)	1
91	I180-601	Muffler	1
92	I180-603	Exhaust Deflector	1
93	00-4158	O-Ring (ø22xø1.5)	1
94	I180-604A I180-604B I180-604C	Air Inlet 3/8"-19PF Air Inlet 3/8"-19PT Air Inlet 3/8"-18NPT	1
95	I150-462	Upper Pin	1
96	I150-463	Lower Pin	1
97	I150-464	Spring	1
99	IS180-450	Block Valve	1
100GE	00-4121	O-Ring (ø15xø1.5)	1
※	I180-109	Tool Cover	1
※	IS180RK-YO	Repair kit: Index No- 5; 12; 15; 16; 19; 20; 23; 25(2); 29(2); 33; 38	
※	IS180SK	Service kit: Index No- 18; 24; 26(2); 27(2); 39; 53(9); 70; 71; 72; 85	
※	01-0507B	Impulse Oil (1000c.c)	
※	01-0508B	Impulse Oil (100c.c)	

★ Pulse unit includes: IS180-400ASM-PR

Index No : 11, 12, 13, 14, 15, 16, 17, 18, 19, 20, 21, 22, 23, 24, 25, 26, 27, 28, 29, 30, 31, 32, 33, 34, 36, 37, 38, 39, 41, 43, 95, 96, 97, 99