



RRI-200T IMPULSE WRENCH

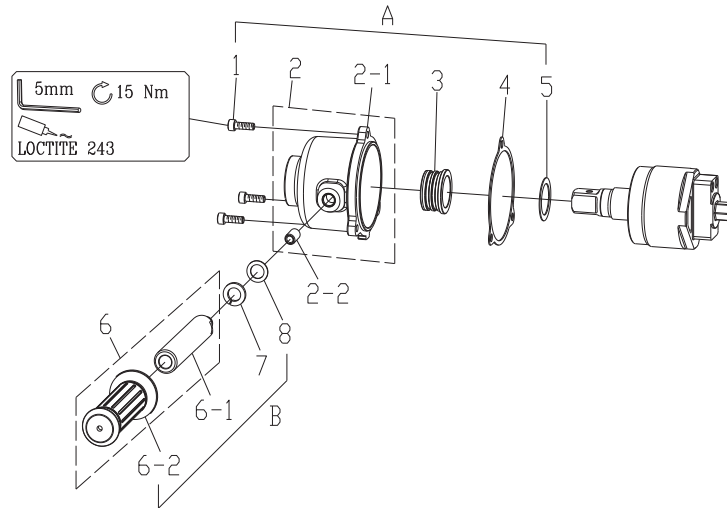

Pulse Unit Casing I

Index No.	Part No.	Description	Q'ty	
A	1	00-0140	Cap Screw (M6xP1x18L)	3
	2	420-PW200-586-0201-10	Front Housing, Compl.	1
	2-1	I200-201	Front Housing	1
	2-2	00-4313	Helicoil (M12xP1.5x1D)	1
	3	I200-202	Bushing	1
	4	I200-205	Gasket	1
	5	I200-424C	Washer (Axial gap: 0.8, 0.9, 1.0 mm)	1

Index No.	Part No.	Description	Q'ty	
B	6	420-PW180-286-0206-10	Side Handle, Compl.	1
	6-1	1180-206	Side Handle (Access. Kit)	1
	6-2	275-029	Rubber Sleeve (Access. Kit)	1
	7	00-1811	Spring Washer (M12) (Acc. Kit)	1
	8	00-1514	Plain Washer (ø13xø19x1t) (Acc. Kit)	1

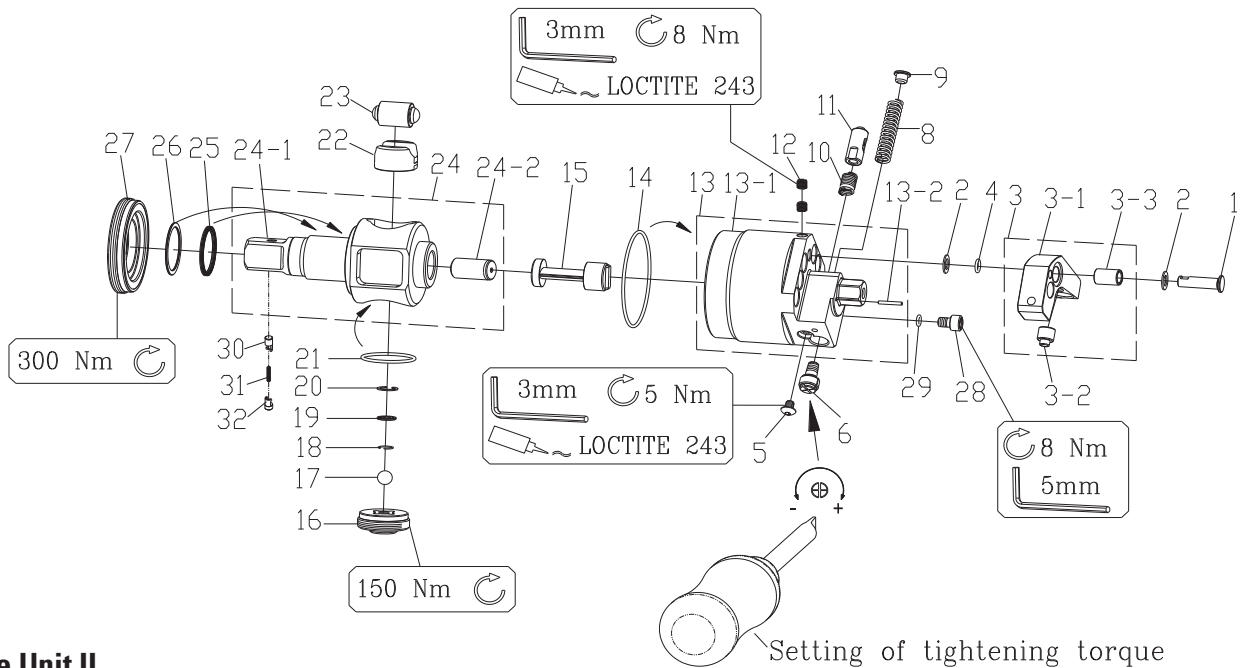


Pulse Unit II

Index No.	Part No.	Description	Q'ty
1	IS200-474	Pin	1
2	IS200-475	Washer	2
3	420-PW200-486-0473-10	Inertia Block, Compl.	1
3-1	IS200-473@	Inertia Block	1
3-2	IS200-483	Pin Block	1
3-3	IS200-491	Bushing	1
4	00-41243	O-Ring (ø6xø1.5)	1
5	00-1304	Cap Screw (M5xP0.8x6L)	1
6	IS200-478	Adjusting Screw	1
8	IS200-481	Adjusting Spring	1
9	IS200-477	Spring Setter	1
10	IS200-484	Spring	1
11	IS200-482	Pin	1
12	IS200-493	Set Screw	2
13	420-PW200-486-0404-10	Pulse Cylinder, Compl.	1
13-1	IS200-404	Pulse Cylinder	1
13-2	00-3472	Pin (ø2x15)	1
14	00-41216	O-Ring (ø60.04xø1.78)	1
15	IS200-479	Roll Shaft	1

Index No.	Part No.	Description	Q'ty
16	IS200-476	Locking Nut	1
17	00-3832	Steel Ball (ø9)	1
18	I200-494	Collar	1
19	I200-469	Washer	1
20	00-3118	C type Retainer Ring (R12)	1
21	00-41136	O-Ring (ø29.87xø1.78)	1
22	I200-467	Piston	1
23	I200-468	Roller	1
24	420-PW200-486-0405-10	Main Shaft, Compl.	1
24-1	IS200-405@	Main Shaft	1
24-2	I200-490	Roller Plug	1
25	00-2606	X-Ring (ø28.17xø35.23xø3.53)	1
26	I200-409	Back Up Ring	1
27	I200-402	Lock Nut	1
28	00-0147	Cap Screw (M6xP1x8L)	1
29	00-41179	O-Ring (ø4.5xø1.5)	1
30	I150-463	Lower Pin	1
31	I150-464	Spring	1
32	I150-462	Upper Pin	1


RRI-200T IMPULSE WRENCH

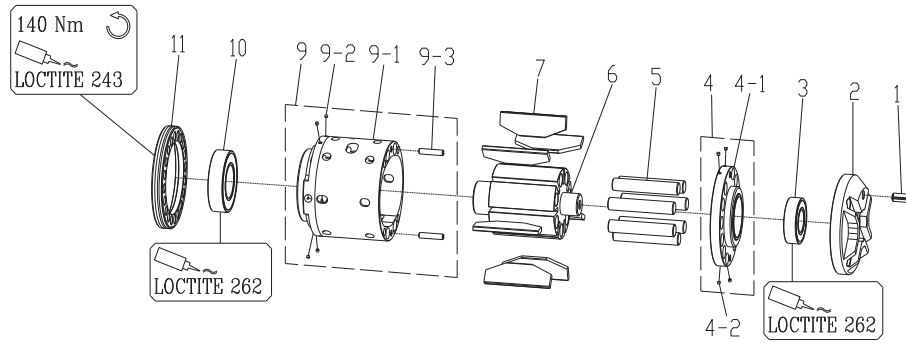

Motor Unit III

Index No.	Part No.	Description	Q'ty
1	00-3370	Spring Pin (ø6x16)	1
2	I200-310	Airinlet Plate	1
3	00-2385	Ball Bearing (6003ZZ / ø35xø17x10T)	1
4	420-PW200-586-0305-10	Rear Plate, Compl.	1
4-1	I200-305@	Rear Plate	1
4-2	I100-318	Block	4
5	I200-322	Roll Plug	7
6	I200-303	Rotor	1

Index No.	Part No.	Description	Q'ty
7	I200-304	Rotor Blade	7
9	420-PW200-586-0302-10	Cylinder, Compl.	1
9-1	I200-302@	Cylinder	1
9-2	I100-318	Block	4
9-3	00-3330	Spring Pin (ø4x20)	2
10	00-2386	Ball Bearing (6005ZZ / ø25xø47x12)	1
11	I200-306	Lock Nut	1

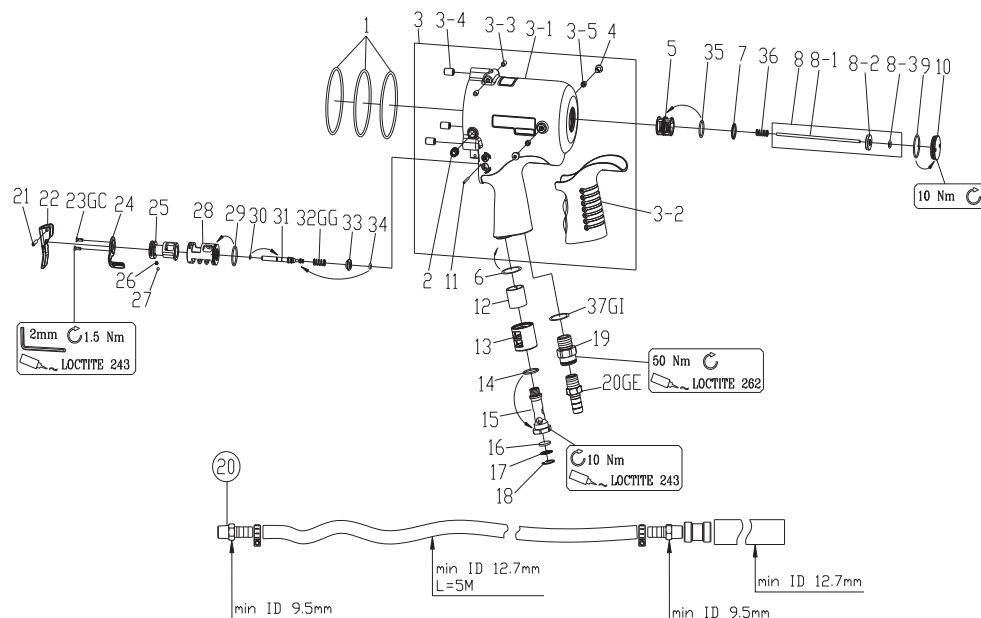

Housing Unit and Valve and Trigger IV

Index No.	Part No.	Description	Q'ty
1	00-41218	O-Ring (ø75.87xø2.62)	3
2	00-0616	Set Screw (M10xP1.5x8L)	1
3	420-PW200-586-0101-10	Motor Housing, Compl.	1
3-1	I200-101	Motor Housing	1
3-2	I200-103	Housing Rubber	1
3-3	00-3353	Spring Pin (ø5x8)	2
3-4	00-4312	Helicoil (M6xP1.0x2D)	3
3-5	00-4302	Helicoil (M5xP0.8x1.5D)	2
4	00-1304	Cap Screw (M5xP0.8x6L) (Access. Kit)	2
5	IS200-518	Seat	1
6	00-41145	O-Ring (ø18xø1.5)	1
7	IS200-312	Valve Washer	1
8	420-PW200-486-0314-10	Shut Off Stem, Compl.	1
8-1	IS200-314	Shut Off Stem	1
8-2	IS200-311@	Valve	1
8-3	00-41245	O-Ring (ø7xø1)	1
9	00-41128	O-Ring (ø25xø1.5)	1
10	I200-104	Nut	1
11	00-3461	Pin (ø2x30)	1
12	I200-601	Muffler	1
13	I200-603	Exhaust Deflector	1
14	00-41111	O-Ring (ø16xø1.5)	1
15	I200-610	Air Inlet Bushing	1
16	I200-605	Muffler	1

Index No.	Part No.	Description	Q'ty
17	I200-606	Filter	1
18	00-3103	C type Retainer Ring (R16)	1
19	I200-604A	Air Inlet (3/8"-19PF)	1
	I200-604B	Air Inlet (3/8"-19PT)	
	I200-604C	Air Inlet (3/8"-18NPT)	
20GE	P45	Hose Nipple (3/8"Px1/2") (Access. Kit)	1
21	00-3308	Spring Pin (ø3x18)	1
22	I150-504	Trigger	1
23GC	00-0512	Flat Head Screw (M3x8L)	2
24	I150-503	Regulator Knob	1
25	IS200-502	F/R Valve	1
26	I100-506	Spring	1
27	00-3813	Steel Ball (1/8")	1
28	I200-501	Valve Sleeve	1
29	00-41146	O-Ring (ø21xø1.5)	1
30	00-4101	O-Ring (ø3xø1)	1
31	IS200-505	Valve Stem	1
32GG	I200-507	Spring	1
33	I150-508	Bushing	1
34	00-41199	O-Ring (ø1.8xø1.9)	1
35	00-41244	O-Ring (ø19xø1.5)	1
36	IS200-317	Spring	1
37GI	00-41217	O-Ring (ø16xø1)	1

RRI-200T IMPULSE WRENCH

Part No.	Description	Q'ty
Repair Kit – Ordering No. IS200RK-YO		
I200-205	Gasket - <i>Pulse Unit</i>	1
00-41216	O-Ring (ø60.04xø1.78) - <i>Pulse Unit</i>	1
00-2606	X-Ring (ø28.17xø35.23xø3.53) - <i>Pulse Unit</i>	1
I200-409	Back Up Ring - <i>Pulse Unit</i>	1
00-41179	O-Ring (ø4.5xø1.5) - <i>Pulse Unit</i>	1

Service Kit – Ordering No. IS200SK		
420-PW200-486-0473-10	Inertia Block, Compl. - <i>Pulse Unit</i>	1
IS200-473@	Inertia Block	1
IS200-483	Pin Block	1
IS200-491	Bushing	1
00-41243	O-Ring (ø6xø1.5) - <i>Pulse Unit</i>	1
00-41136	O-Ring (ø29.87xø1.78) - <i>Pulse Unit</i>	1
I200-304	Rotor Blade - <i>Motor Unit</i>	7
00-2386	Ball Bearing (6005ZZ) - <i>Motor Unit</i>	1

Part No.	Description	Q'ty
00-41218	O-Ring (ø75.87xø2.62) - <i>H.U. and V. and Tr.</i>	3
00-41145	O-Ring (ø18xø1.5) - <i>H. Unit and Valve and Tr.</i>	1
00-41128	O-Ring (ø25xø1.5) - <i>H. Unit and Valve and Tr.</i>	1
I200-601	Muffler - <i>H. Unit and Valve and Trigger</i>	1
00-41111	O-Ring (ø16xø1.5) - <i>H. Unit and Valve and Tr.</i>	1
I200-605	Muffler - <i>H. Unit and Valve and Trigger</i>	1
00-41146	O-Ring (ø21xø1.5) - <i>H. Unit and Valve and Tr.</i>	1
00-4101	O-Ring (ø3xø1) - <i>H. Unit and Valve and Tr.</i>	1
00-41199	O-Ring (ø1.8xø1.9) - <i>H. Unit and Valve and Tr.</i>	1
IS200-317	Spring - <i>H. Unit and Valve and Trigger</i>	1
00-41244	O-Ring (ø19xø1.5) - <i>H. Unit and Valve and Tr.</i>	1
I200-467	Piston - <i>Pulse Unit</i>	1
I200-468	Roller - <i>Pulse Unit</i>	1
420-PW200-486-0405-10	Main Shaft, Compl. - <i>Pulse Unit</i>	1
IS200-405	Main Shaft	1
I200-490	Roller Plug	1
I200-402	Lock Nut - <i>Pulse Unit</i>	1

Housing Unit and Valve and Trigger IV

Part No.	Description	Q'ty
I200-109	Tool Cover	1
01-0507C	Impulse Oil (1000c.c)	
01-0508C	Impulse Oil (100c.c)	

