



# RRI-SD11601 SHUT-OFF SCREWDRIVER

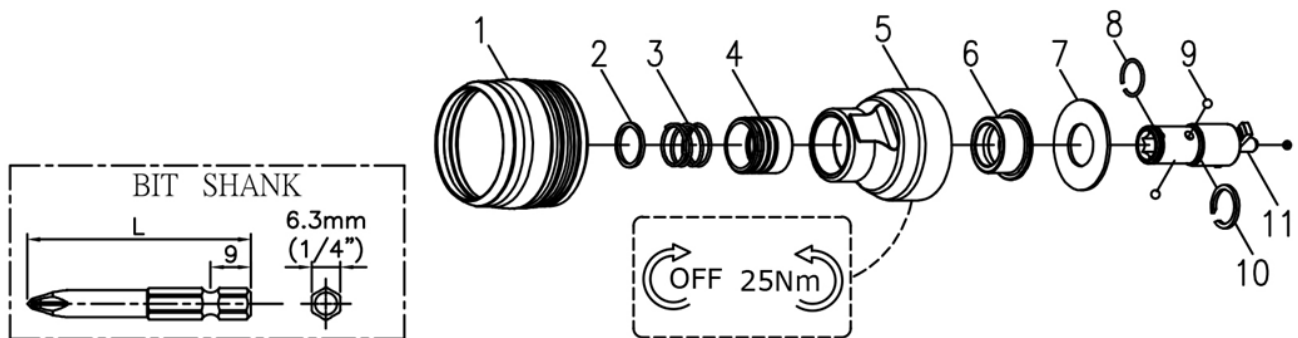

## Anvil Units

| Index No. | Part No.                   | Description                        | Q'ty     |
|-----------|----------------------------|------------------------------------|----------|
| 1         | B10S-207                   | Adjusting Cover                    | 1        |
|           | <b>220-BS20S-4005-1000</b> | <b>Anvil Units (Index No.2~11)</b> | <b>1</b> |
| 2         | B20S-415                   | Spring Washer                      | 1        |
| 3         | B20S-418                   | Spring (Ø11.4xØ0.6x16L)            | 1        |
| 4         | B20S-417                   | Quick Change Holder                | 1        |
| 5         | B20S-420                   | Housing Cover                      | 1        |

| Index No. | Part No.  | Description                   | Q'ty |
|-----------|-----------|-------------------------------|------|
| 6         | B20S-202  | Anvil Bushing                 | 1    |
| 7         | 00-1516   | Washer (AS-1226(Ø12xØ26 x1t)) | 1    |
| 8         | B20S-428B | Anvil Collar B                | 1    |
| 9         | 00-3835   | Steel Ball (Ø2.5)             | 2    |
| 10        | B20S-428A | Anvil Collar A                | 1    |
| 11        | B20S-405  | Anvil                         | 1    |

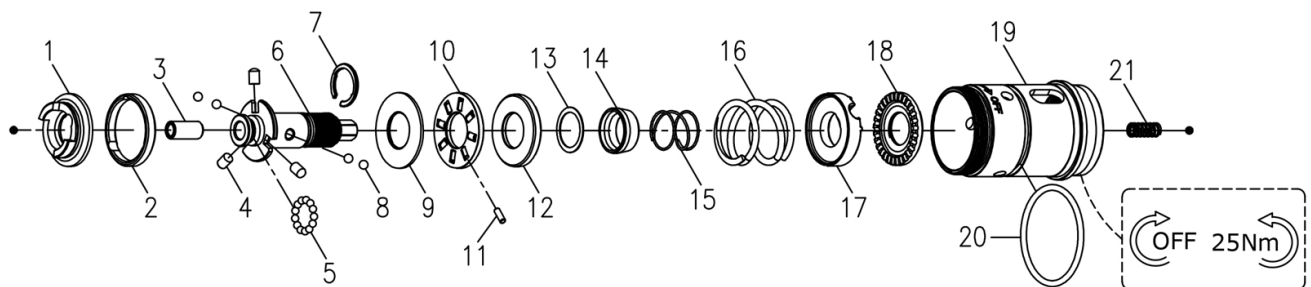


## Clutch Units

| Index No. | Part No.                   | Description                         | Q'ty     |
|-----------|----------------------------|-------------------------------------|----------|
|           | <b>220-BS10S-4016-2000</b> | <b>Clutch Units (Index No.1~18)</b> | <b>1</b> |
| 1         | B20S-425                   | Clutch Ring                         | 1        |
| 2         | B20S-424                   | Ejector Ring                        | 1        |
| 3         | 00-6301                    | DU Bearing (Ø4xØ6x6L)               | 1        |
| 4         | B20S-426                   | Ejector Pin                         | 3        |
| 5         | 00-3835                    | Steel Ball (Ø2.5)                   | 13       |
| 6         | B10S-416                   | Transmission Shaft                  | 1        |
| 7         | B20S-428C                  | Anvil Collar C                      | 1        |
| 8         | 00-3826                    | Steel Ball (Ø3)                     | 4        |
| 9         | 00-1516                    | Washer (AS-1226(Ø12xØ26 x1t))       | 1        |
| 10        | B20S-410                   | Washer                              | 1        |

| Index No. | Part No.   | Description         | Q'ty |
|-----------|------------|---------------------|------|
| 11        | 00-3471    | Pin (Ø2.5x4L)       | 8    |
| 12        | B20S-433   | Spring Seat         | 1    |
| 14        | B20S-449   | Control Ring        | 1    |
| 15        | B30S-427   | Spring              | 1    |
| 16        | B10S-429   | Spring              | 1    |
| 17        | B20S-431   | Adjusting Lock Ring | 1    |
| 18        | B20S-430-B | Adjusting Nut       | 1    |
| 19        | B10S-201   | Clutch Housing      | 1    |
| 20        | 00-41222   | O-Ring (Ø25xØ2)     | 1    |
| 21        | C20S-450   | Spring              | 1    |


# RRI-SD11601 SHUT-OFF SCREWDRIVER

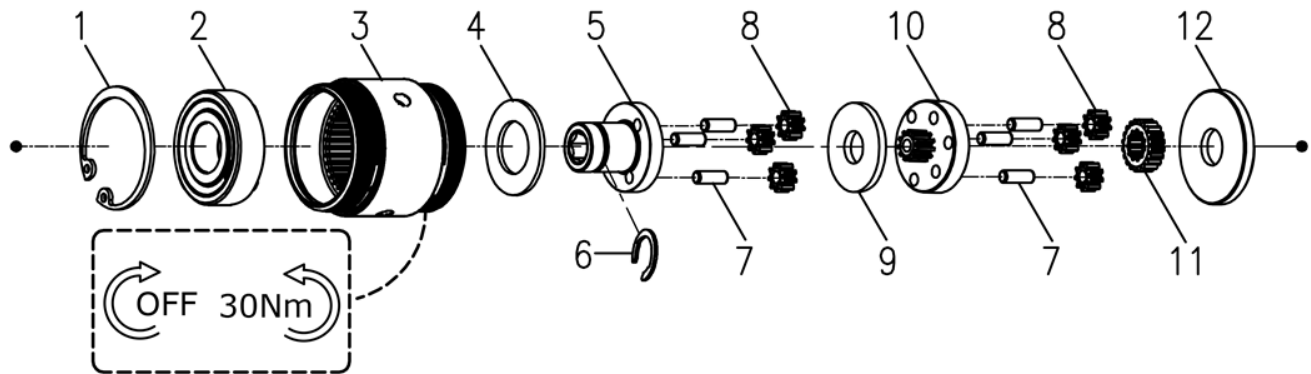

## Gear Box Units

| Index No. | Part No.                   | Description           | Q'ty     |
|-----------|----------------------------|-----------------------|----------|
|           | <b>220-BS10P-4040-2000</b> | <b>Gear Box Units</b> | <b>1</b> |
| 1         | 00-3110                    | Snap Ring (R22)       | 1        |
| 2         | 00-2318A                   | Ball Bearing (EE3)    | 1        |
| 3         | B10S-440                   | Internal Gear         | 1        |
| 4         | C10S-441                   | Washer                | 1        |
| 5         | C10S-442                   | Front Gear Cage       | 1        |
| 6         | 00-3512                    | Snap Ring (C37)       | 1        |

| Index No. | Part No.  | Description    | Q'ty |
|-----------|-----------|----------------|------|
| 7         | 00-3448   | Pin (Ø2.5x8L)  | 6    |
| 8         | C10S-443A | Planet Gear    | 6    |
| 9         | C10S-444  | Washer         | 1    |
| 10        | C10S-452  | Rear Gear Cage | 1    |
| 11        | C10S-447  | Rotor Gear     | 1    |
| 12        | C10S-448  | Rear Cover     | 1    |

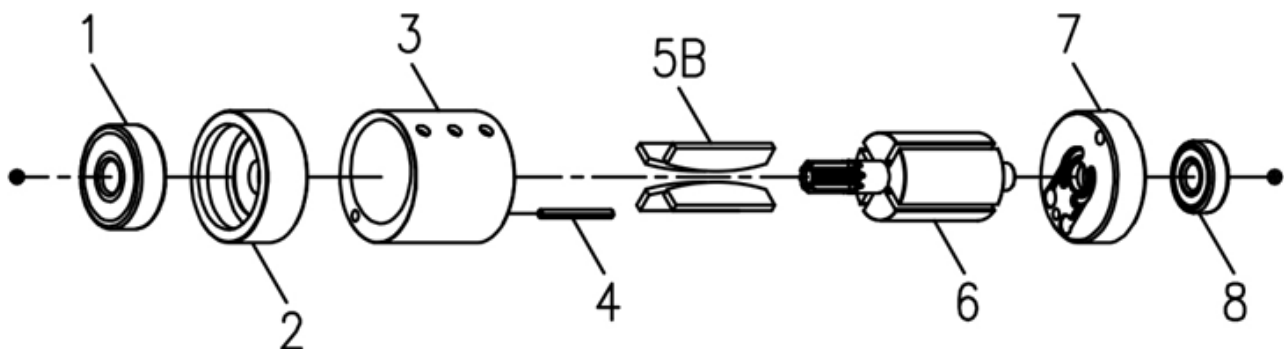


## Motor Units

| Index No. | Part No.                   | Description           | Q'ty     |
|-----------|----------------------------|-----------------------|----------|
|           | <b>220-BS10S-3003-1000</b> | <b>Motor Units</b>    | <b>1</b> |
| 1         | 00-2323                    | Ball Bearing (626ZZ)  | 1        |
| 2         | C10S-301                   | Front Plate           | 1        |
| 3         | C10S-302                   | Cylinder              | 1        |
| 4         | 00-3362                    | Spring Pin (Ø1.5x16L) | 1        |

| Index No. | Part No.   | Description         | Q'ty |
|-----------|------------|---------------------|------|
| 5B        | BD10S-304D | Rotor Blade         | 4    |
| 6         | CS10S-303  | Rotor               | 1    |
| 7         | C10S-305   | Rear Plate          | 1    |
| 8         | 00-2370    | Ball Bearing (695Z) | 1    |

# RRI-SD11601 SHUT-OFF SCREWDRIVER

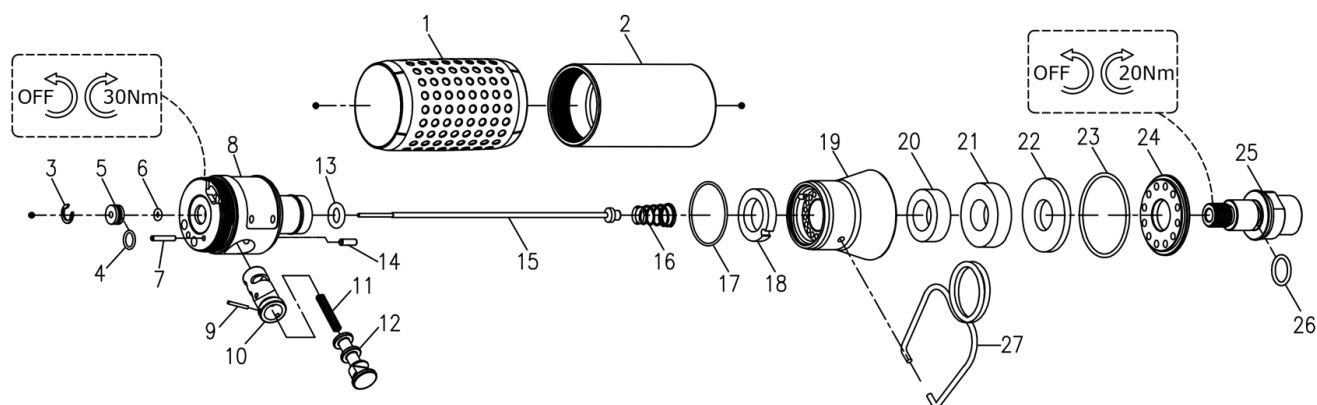

## Motor Housing & Valve Cage Units

| Index No. | Part No.                   | Description                             | Q'ty     |
|-----------|----------------------------|-----------------------------------------|----------|
| 1         | B10S-103                   | Housing Rubber                          | 1        |
| 2         | C10S-101                   | Motor Housing                           | 1        |
|           | <b>220-CS10S-5018-1000</b> | <b>Valve Cage Units (Index No.3~13)</b> | <b>1</b> |
| 3         | 00-3115                    | Snap Ring (R8)                          | 1        |
| 4         | 00-41189                   | O-Ring (Ø6xØ1)                          | 1        |
| 5         | C20S-526                   | Guide Ring                              | 1        |
| 6         | 00-41113                   | O-Ring (Ø2xØ1.5)                        | 1        |
| 7         | 00-3447                    | Pin (Ø2x12L)                            | 1        |
| 8         | C10S-518                   | Seat                                    | 1        |
| 9         | 00-3366                    | Spring Pin (Ø1.5x10L)                   | 1        |
| 10        | C10S-501                   | Valve Sleeve                            | 1        |
| 11        | C20S-528                   | Spring                                  | 1        |
| 12        | C10S-502                   | Reverse Valve                           | 1        |
| 13        | 00-41176                   | O-Ring (Ø4.5xØ2)                        | 1        |
| 14        | 00-3448                    | Pin (Ø2.5x8L)                           | 1        |

| Index No. | Part No.  | Description            | Q'ty |
|-----------|-----------|------------------------|------|
| 15        | B10S-314  | Valve Stem             | 1    |
| 16        | C10S-515  | Spring                 | 1    |
| 17        | 00-41225  | O-Ring (Ø25x Ø27xØ1)   | 1    |
| 18        | C10S-601  | Muffler                | 1    |
| 19        | B10S-603  | Exhaust Deflector      | 1    |
| 20        | B10S-601A | Muffler                | 1    |
| 21        | B10S-601B | Muffler                | 1    |
| 22        | B10S-601C | Muffler                | 1    |
| 23        | 00-4174   | O-Ring (Ø31xØ1.5)      | 1    |
| 24        | B10S-608  | Deflector cap          | 1    |
| 25        | B10S-604A | Air Inlet (1/4"-PF19)  | 1    |
|           | B10S-604B | Air Inlet (1/4"-PT19)  |      |
|           | B10S-604C | Air Inlet (1/4"-NPT18) |      |
| 26        | 00-4157   | O-Ring (Ø10xØ1.5)      | 1    |
| 27        | B20S-102  | Hanger                 | 1    |